# E1039 Polarized Target Monitoring & Maintenance Guide

SpinQuest (E1039) Polarized Target group


Revised on 02/26/2023

If you are "new" for the helper shift, please contact the Target Expert on shift in advance to arrange the initial walkthrough together...

Link to the spreadsheet to record the values:

https://docs.google.com/spreadsheets/d/1EDTHSeUDGJ9b6beYizHEAJ8-Z1rAiQbZMgKhmloPLw8/ (navigate to the tables using the labels at the bottom)

### **Target Shifts & elog entry**

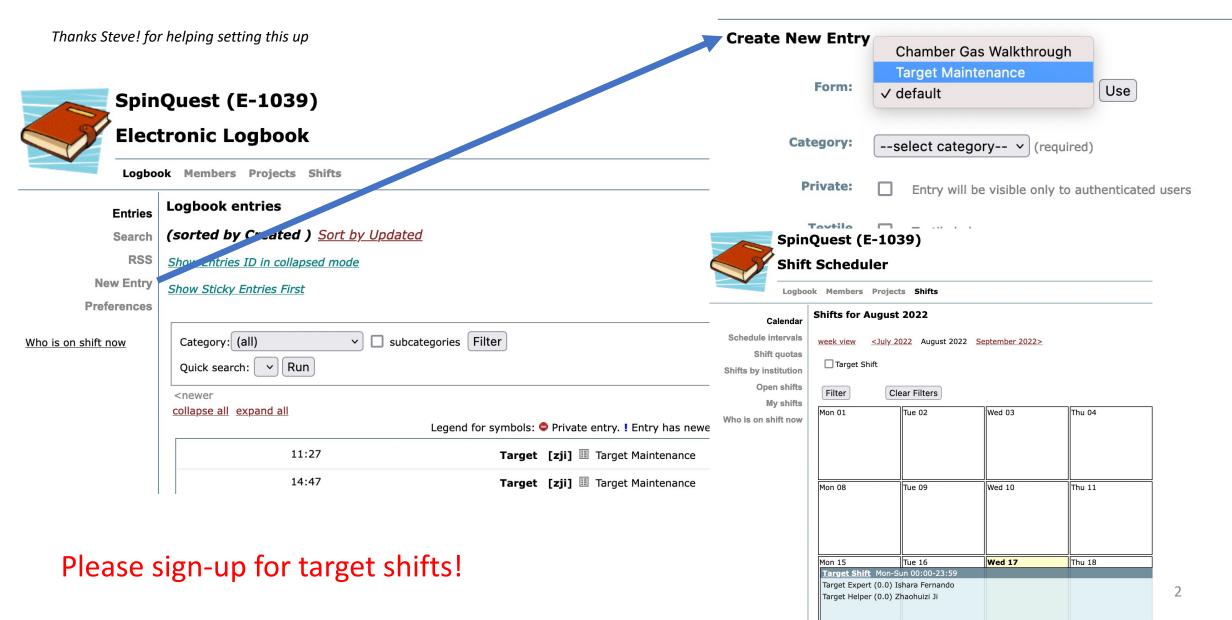

### Outline

Target Shift Helper tasks can be categorized into two main sections in these slides:

- Target System Monitoring [Once per hour through 08:00 to 18:00]
  In addition to the basic monitoring tasks, discussed in these slides, target expert can ask additional monitoring help if needed and those depends on system's status/tests at the moment. Target expert will provide guidance if that's the case.
- Target Maintenance & ECL entry informationMake sure the supplies are available (or arranged to be delivered)
  - > One elog-entry per day is needed [attend daily 8:30 am meeting for access requests]

Also, please coordinate with the Target expert on shift to help with other routine maintenance tasks (eg: filling LN2 to purifier, filling gHe to outside tanks, etc.)

Please don't forget record the numbers on the spreadsheet below when you get readings for the elog entry: <a href="https://docs.google.com/spreadsheets/d/1EDTHSeUDGJ9b6beYizHEAJ8-Z1rAiQbZMgKhmloPLw8/">https://docs.google.com/spreadsheets/d/1EDTHSeUDGJ9b6beYizHEAJ8-Z1rAiQbZMgKhmloPLw8/</a> (navigate to the tables using the labels at the bottom)

### Trainings needed on your ITNA

➤ Please contact Rick to add the following training modules to your ITNA. These trainings will be required in case you are helping for some maintenance tasks such as replacing gas bottles, handling LN2, etc.

FN000213 Compressed Gas Cylinder Safety

FN000304 Fall Protection

FN000654 Ladder User Safety

**FN000271** Pressure Safety Orientation

FN000115 Cryogenic Safety (General)

FN000475 Large portable Dewar handling


Please don't forget record the numbers on the spreadsheet below when you get readings for the elog entry: <a href="https://docs.google.com/spreadsheets/d/1EDTHSeUDGJ9b6beYizHEAJ8-Z1rAiQbZMgKhmloPLw8/">https://docs.google.com/spreadsheets/d/1EDTHSeUDGJ9b6beYizHEAJ8-Z1rAiQbZMgKhmloPLw8/</a>



### Target System Monitoring


Navigate to: <a href="https://e906-gat1.fnal.gov/data-summary/e1039/">https://e906-gat1.fnal.gov/data-summary/e1039/</a>



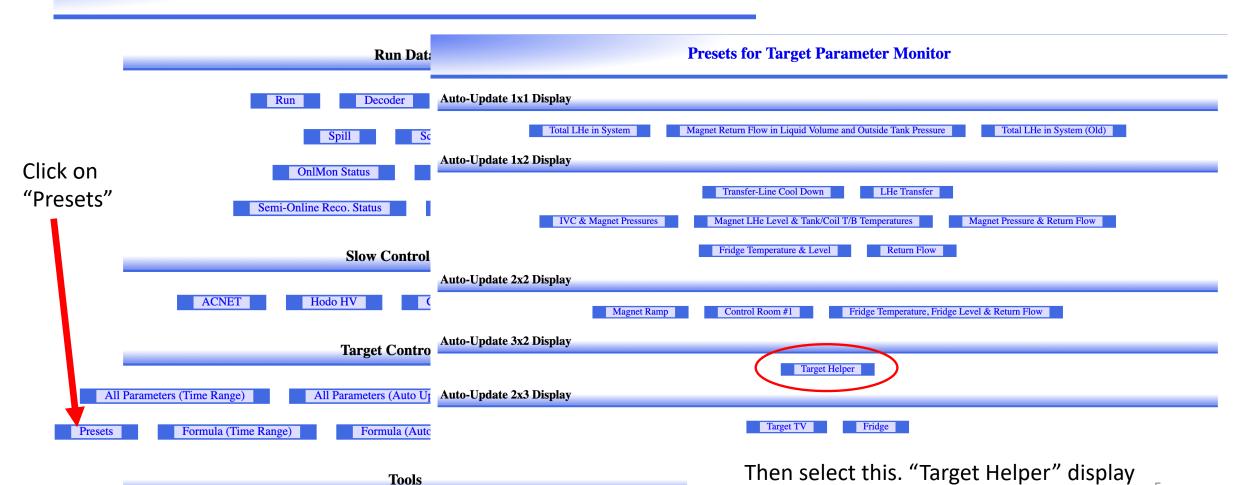



#### Target Helper Displays

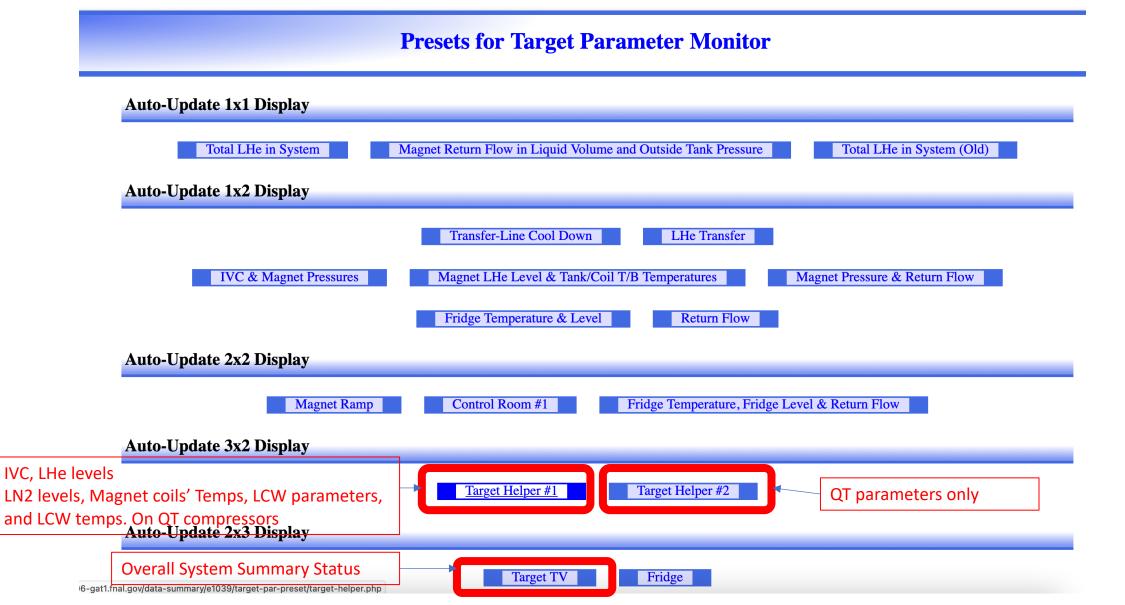




### Target Helper Displays

We would recommend you to check this screen at least once every hour and communicate with Target Expert on the shift if you see the following conditions (or outside the given range).

- Insulation Vacuum: Peak(s) higher than 1x10<sup>(-5)</sup> Torr.
- LN2 levels on the purifier and Magnet shield:
   Both levels should be > 50%. Otherwise, need fill
- 3) Magnet Coils' Temperatures: 54

  If the Tank B (blue) starts going above 5 Kelvin.
- 4) LHe levels in the,
  - > Magnet ( should be  $\sim$ 80 L. 145 L )
  - > LQ A and LQ B (should be  $\sim 50 L 225 L$ )

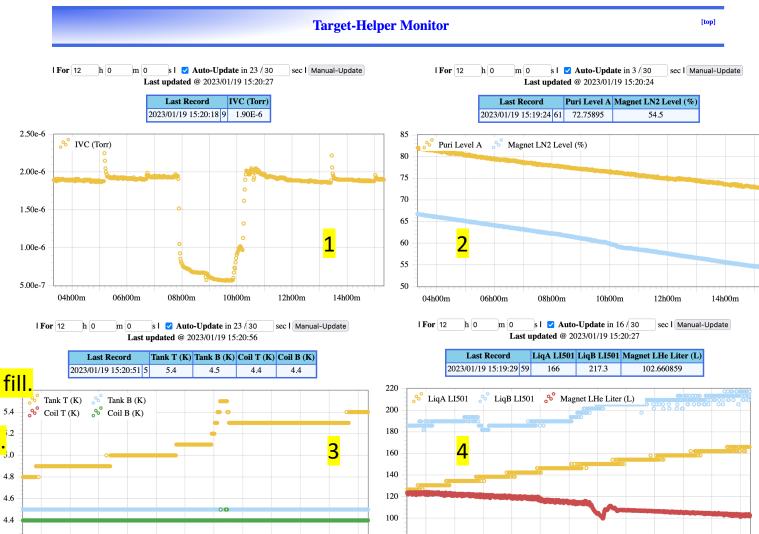

12h00m


14h00m



### **Target System Monitoring (Customized)**

Tools

Navigate to: <a href="https://e906-gat1.fnal.gov/data-summary/e1039/">https://e906-gat1.fnal.gov/data-summary/e1039/</a>

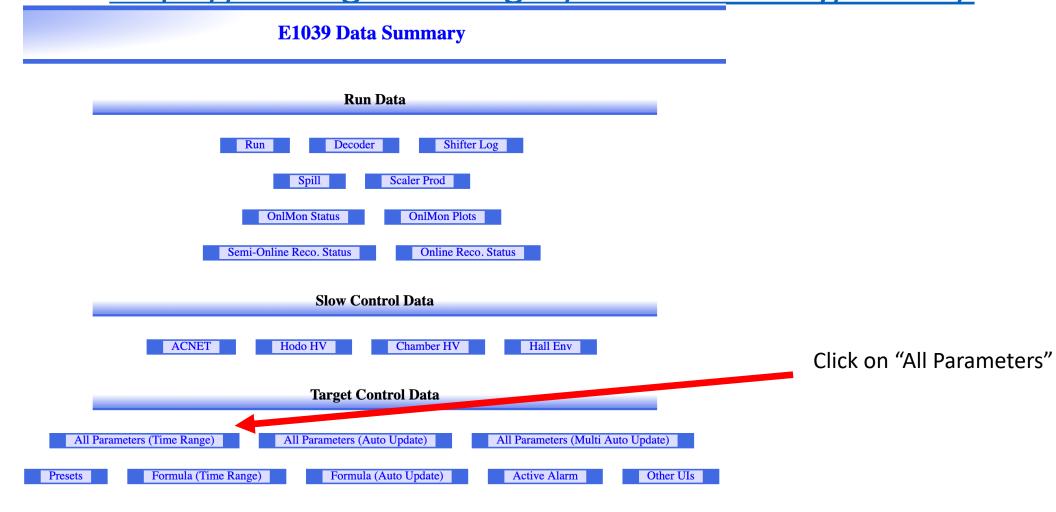



### **Target System Monitoring (Customized)**

Navigate to: <a href="https://e906-gat1.fnal.gov/data-summary/e1039/">https://e906-gat1.fnal.gov/data-summary/e1039/</a>

All Target Parameters				
I From 2023 /01 /19 14 : 36 : 49 to 2023 /01 /19 15 : 36 : 49 I Draw I Chart Option »  No parameter is selected.				
QT LiqA	□ PT501 □ PT502 □ PT503 □ PD □ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI			
QT LiqB	□ PT501 □ PT502 □ PT503 □ PD □ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI			
QT Purifier	□ T1A □ Level B □ Level A □ PRTY_Calibrated □ PRTY □ PBB □ PBA □ PRTY_Calibrated_B_Out □ PRTY_Calibrated_B_Mid □ PRTY_Calibrated_A_Out □ PTB □ PRTY_Calibrated_A_Mid □ Flow Controller Flow □ Vfc □ DPfc □ Pfc □ T2B □ T1B □ T2Amv □ T1Amv □ T2A □ PTA			
QT System	<ul> <li>Manifolds PT8</li> <li>Manifolds Magnet Dewar Level</li> <li>Manifolds TCD_Smooth</li> <li>Manifolds TX1</li> <li>Manifolds FMR</li> <li>Manifolds Magnet Dewar Pressure</li> <li>Manifolds PC1</li> <li>ODH EV-105-N</li> <li>ODH TE-104N</li> <li>ODH TE-107N</li> <li>ODH LL-106-N</li> <li>ODH TE-109N</li> <li>HR3 Enabled</li> <li>ODH PT-106-N</li> <li>ODH PT-110-N</li> </ul>			
Cryo Pressure	□ IVC □ Fridge/1000 □ Fridge/100 □ He3 Probe □ Return Manifold □ Main Return #1 □ Roots-Pump Top □ Roots-Pump Middle □ Separator Return □ Magnet Return □ Main Return #2 □ n/c			
Cryo Purity	☐ He Purity			
Cryo Temperature	□ Fridge/1000 □ Fridge/He3 □ Tank T □ Tank B □ Coil T □ Coil B □ Coil T1 □ Coil T2 □ Coil T3 □ Coil T4 □ Coil B1 □ Coil B2 □ Coil B4 □ IVC Side Bottom □ IVC Side Top □ Fridge Top □ LHe FL Stinger □ LHe FL #1 □ LHe FL #2 □ Cooldown Line TX3 □ Cooldown Line TX2 □ Annealing A □ Annealing B □ Microwave A □ Microwave B □ He Riser □ IVC Top □ Baffle Top □ Baffle Bottom □ Separator Top □ Separator Bottom □ Heat-Ex Top □ Heat-Ex Bottom □ Ann-Plate Bar □ Ann-Plate Top □ QT 1A □ QT 2A □ QT 3A □ QT 4A □ QT 5A □ QT 1B □ QT 2B □ QT 3B □ QT 4B □ QT 5B			
Cryo Level	□ Nose LHe Level □ Run Valve □ Bypass Valve □ Magnet LHe Level □ Magnet LN2 Level □ Magnet LHe Liter			
Cryo Magnet	☐ Output Current ☐ Persistent Current ☐ Output Voltage			
Cryo Flow	☐ Magnet Return ☐ Separator Return ☐ Main Return			
Roots-Pump P&T	□ P1 □ P2 □ P3 □ T1 □ T2 □ T3			
Roots-Pump LCW	□ M1 □ M2 □ M3 □ M4 □ WFS1			
ACNet	☐ F:NM4LCWFLOW ☐ F:NM4LCWP1 ☐ F:NM4LCWP2 ☐ F:NM4LCWP3 ☐ F:NM4LCWT1 ☐ F:NM4LCWT2 ☐ F:NM4LCWT3			

You can access almost all the target parameters through this panel by

- 1) Selecting Check boxes
- 2) Providing time-frame
- 3) Or use "Auto" update functionality on the previous page.

### **A** Monitoring QT Dewar Parameters

QT LiqA	□ PT501 □ PT502 □ PT503 □ PD ☑ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI
QT LiqB	□ PT501 □ PT502 □ PT503 □ PD ☑ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI

Please check both Liquefier parameters once in every three-hours.

Important parameters for QT Liquefiers can be accessed by checking the relevant box(es). Check both Liquefiers A and B.

Param	Meaning	Operational Range
PT501	Main Inlet pressure	Usually, ~ 20 psi less than outside tank pressure
PT502	Regulated inlet pressure to LQ	~ 3 – 8 psi
PT503	Dewar Pressure	~ 3 – 8 psi
LI501	Dewar LHe level	50L – 225L
TI502-10	Coldhead Temps.	Usually 4 K – 7 K (During a fill it will be 30K – 80 K) when LQ is on "Manual" mode
FC501Q,I	Inlet flow	~ 20 - 60slm
FCQ, FCI	Outlet flow	~ 0-2slm

If you see any of these outside the operational range, please immediately inform the target expert on shift!




### Monitoring Main LCW Inlet/Outlet P & T

link: <a href="https://e906-gat1.fnal.gov/data-summary/e1039/">https://e906-gat1.fnal.gov/data-summary/e1039/</a>

Check the LCW flow, pressures and temperatures by checking the boxes as shown.

Please contact target expert on shift if you notice any of the following (in magnitude).

- 1) If the flow is less than "30"
- 2) If P in is less than "55"
- 3) If P out is less than "30"
- 4) If T\_in is higher than "90"
- 5) If T\_out is higher than "100"

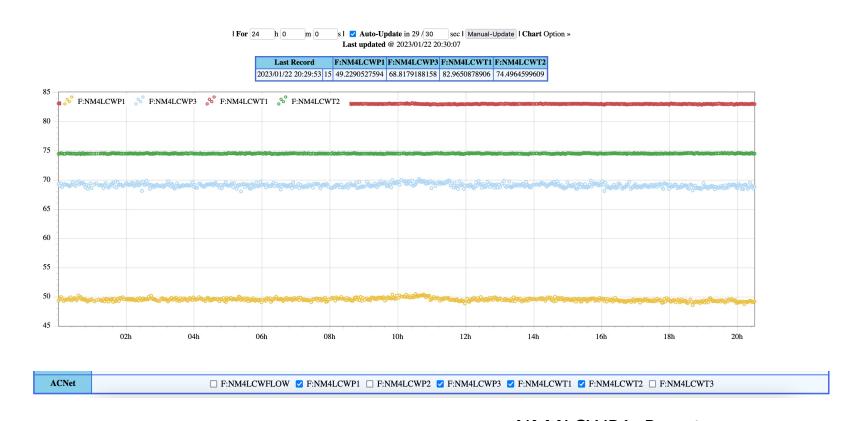

Usually these curves should be flat (as shown in this plot), if you see any spikes, or unusual behavior, then please inform the target expert on shift immediately!

NM4LCWP1=P\_out NM4LCWP3=P\_in NM4LCWT1=T\_out NM4LCWT2=T\_in



### Monitoring QT compressor LCW temperatures


Navigate to: <a href="https://e906-gat1.fnal.gov/data-summary/e1039">https://e906-gat1.fnal.gov/data-summary/e1039</a> the select "Cryo Control" under "Target Control Data" Section.

Select the "LabJack U3 – QT Compressor LCW" from the drop down menu under "Subsystem" field selection.

Leave the default times as it is and hit "Show" button

[Direct link: https://e906-gat1.fnal.gov/data-summary/e1039/target-cryo-cont.php?subsys=LabJack+U3]

Look at the plot and confirm that the last recording time is within one minute and all the temperature readings are below the limit (115 F).

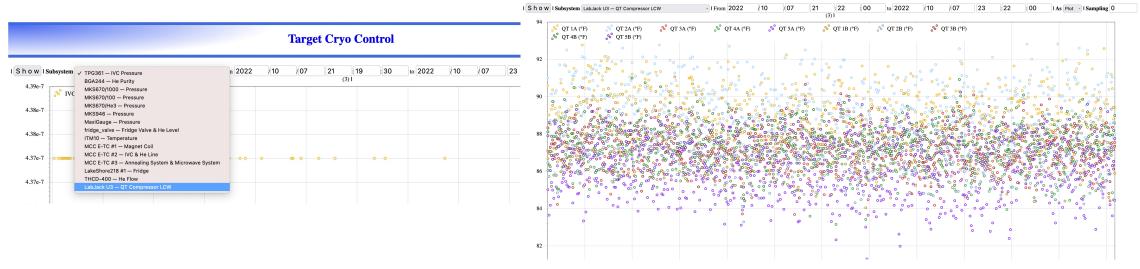

### B

### Record the number of gHe and gN2 bottles at the outside rack



- ➤ Read the labels/tags on each bottle to identify for gHe or gN2
- ➤ If the number of **full** bottles from either type is less than 4, then please send an email to Kun Liu (<u>liuk.pku@gmail.com</u>) to order more bottles


В

Check gHe pressure and LN2 pressure of the

the inform Target Expert

outside tanks

☐ IVC ☐ Fridge/1000 ☐ Fridge/100 ☐ He3 Probe

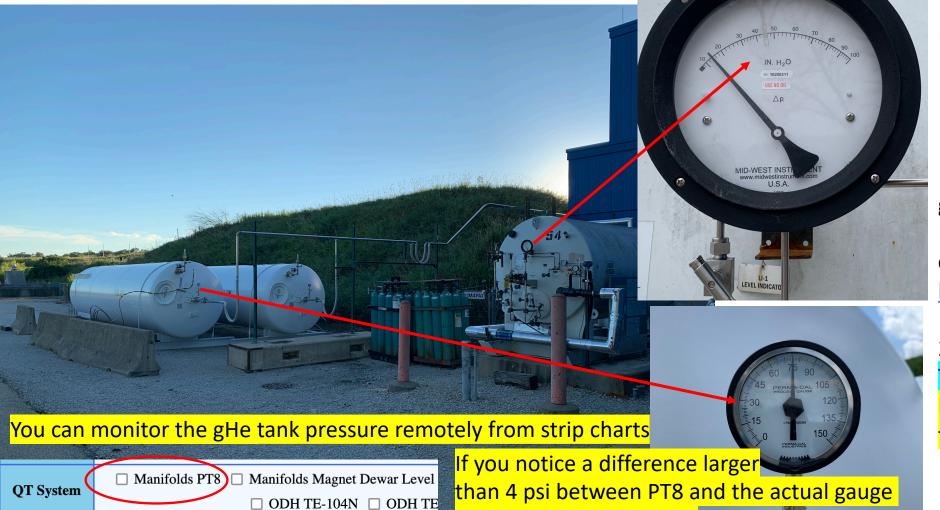

LN2 Tank Pressure: Send an email to Jordan Bohn jbohn@fnal.gov and cc Target Expert and Rick if the indicator is less than ~15 IN.H<sub>2</sub>O), so they will arrange a refill.

gHe Tank Pressure
[Note: Both gHe tanks are
connected](Notify Kun
liuk.pku@gmail.com
if the pressure is less than
25 psi) [Coordinate with
Target Expert if a refill is needed]
Notify Target Expert if
this is 118 PSI

### В

### Filling gHe outside tanks using tube-trailer





Please contact the Target Expert on Shift to coordinate to fill gHe tanks using a tube trailer

The filling procedure can be found here:

https://seaquest-docdb.fnal.gov/cgi-bin/sso/ShowDocument?docid=10198



## Check the number of LN2 portable Dewars outside the loading dock



- ➤ Check the number of "full" Dewars which are usually placed near this door (whereas the empty ones towards the East side of the loading dock door).
- On some of the Dewars there is a liquid level indicator on the top.
- If there isn't a liquid level indicator or it's not clear, then contact the target expert on shift.
- If the number of portable Dewars are less than or equal to 2, then please send an email to

Kun Liu (<u>liuk.pku@gmail.com</u>) to order more.

### B

## Checking two gHe bottles' levels on the west-wall of the cryoplatform

Location: Hall

#### Do not do this without FN000213/CR training

1. Open the Gas bottle using the rotating knob on the top of the bottle (turning anti-clockwise) to read the value of this meter on the right hand-side.

Close the rotating knob (turning clockwise) once you are done reading the pressure.

2. If this level is low (or below 100psi) then replace cylinder(s) with new one(s).

Contact Target Expert on shift
Slide #12 shows the gas rack location

3. Make sure to keep the bottle closed (by tightening clockwise), unless target expert asked you to leave it open.






### Check QT HR3 gauges

If "MANUAL START" button is not green then please contact the Target expert on shift

Buffer tank pressure



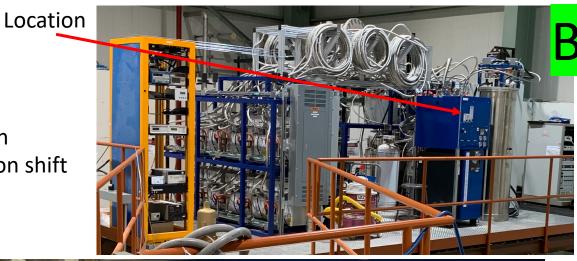



18

Item #22 (In-person section)

### Check oil levels of all 4 pumps

There are 4 pumps in the ROOTs pumps setup

- Check the oil level on each pump
- Oil-level indicators
- When the pumps are running
  - > Level should be close to 40%-60%
- When the pumps are not running
  - > Level should be close to "full" (~60% for the top three pumps, and ~80% for bottom pump)

Notify Target Expert shift contact if the levels are different from the above mentioned levels.



### B

### Check QT liquid (Dewar) levels

Item #23 See slide #6 to compare with Target Helper Screen

LHe levels





Liquid levels can be read using these meters on each Dewar separately



LHe Dewars A and B

Also, check the level shown in the online strip charts and report to the target expert if the levels are off by more than 10 L

QT LiqA	□ PT501 □ PT502 □ PT503 □ PD ☑ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI
QT LiqB	□ PT501 □ PT502 □ PT503 □ PD ☑ LI501 □ PT □ TID □ TI502 □ TI504 □ TI506 □ TI508 □ TI510 □ FC501Q □ FC501I □ FCQ □ FCI